INSTALLATION INSTRUCTIONS

For Model #664-PL,666-PL,668-PL

WARNING! SHUT POWER OFF AT FUSE OR CIRCUIT BREAKER.

CAUTION

Turn off the main power at the circuit breaker before installing the fixture, in order to prevent possible shock.

GENERAL

All electrical connections must be in accordance with local unfamiliar with proper electrical wiring connections obtain the services of a qualified electrician.

Remove the fixture and the mounting package from the box and make sure that no parts are missing by referencing the illustrations on the installation instruction.

ASSEMBLY AND INSTALLATION

1. Turn off the power.
2. Remove the NUTS(19)from one of the END CAP (18).Then take the End Cap out and pull the Acrylic Lens(21) out from the other end of End Cap(18).
3. Pull the SUPPLY WIRES (2) & (4) and HOUSE GROUND WIRE (3) out from the OUTLET BOX (1).
4. Loosen the 2 COPPER NUTS(15) on the FIXTURE BODY(14).Then take the BACK PANEL(10)out from the FIXTURE BODY(14).
5. Position the BACK PANEL(10) over the OUTLET BOX (1). Mark the location of the two KEYHOLE SLOTS located on the BACK PANEL(10). Be sure to mark only the narrow part of the KEYHOLE SLOTS. Remove the BACK PANEL(10) from the ceiling. Drill the two holes using the appropriately sized drill bit. Insert the provided Ceiling ANCHORS (9) into the holes.
6. Put all the fixture wires through BACK PANEL (10).
7. Make the wiring connections: connect the WHITE SUPPLY WIRE(2) to the WHITE FIXTURE WIRE(5); connect the BLACK SUPPLY WIRE(4) to the BLACK FIXTURE WIRE(7);connect the HOUSE GROUND WIRE (3)to the FIXTURE GROUND WIRE (6)using WIRE CONNECTOR(8) (PROVIDED). Carefully tuck all wires back into the OUTLET BOX (1) (See Fig.2)
8. Locate the BACK PANEL (10) over the OUTLET BOX (1), put the MOUNTING SCREWS (13) through the slots on the back panel. Then secure the MOUNTING SCREWS(13) to the OUTLET BOX(1)tightly. Secure the ANCHOR SCREWS (12) to the ANCHORS(9)
9. Put the FIXTURE BODY(14) over the BACK PANEL(10) through the two SCREWS(11) and secure it by 2 COPPER NUTS (15).
10. Now you are ready to install the LAMP(20). Do not exceed recommended maximum wattage.
11. Insert the ACRYLIC LENS (21) to one end of the End Cap. Then put the other end cap through the SCREWS(17) and secured by the NUTS(19).

Fig.1

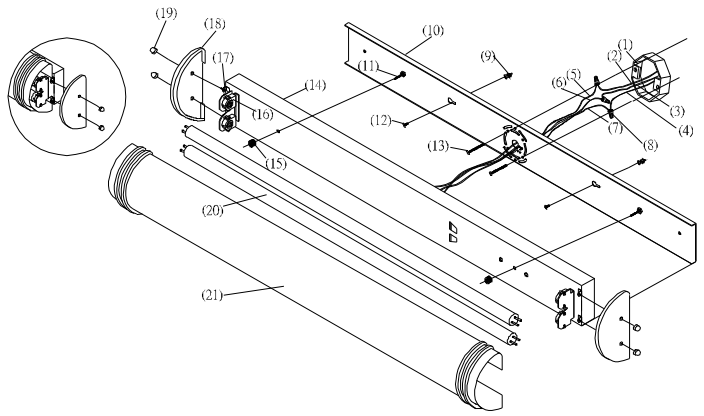

1. OUTLET BOX
2. WHITE SUPPLY WIRE
3. HOUSE GROUND WIRE
4. BLACK SUPPLY WIRE
5. WHITE FIXTURE WIRE
6. FIXTURE GROUND WIRE
7. BLACK FIXTURE WIRE
8. WIRE CONNECTOR
9. ANCHOR
10. BACK PANEL
11. SCREW
12. ANCHOR SCREW
13. MOUNTING SCREW
14. FIXTURE BODY
15. COPPER NUT
16. SOCKET
17. SCREW
18. END CAP
19. NUT
20. LAMP
21. ACRYLIC LENS

Fig. 2

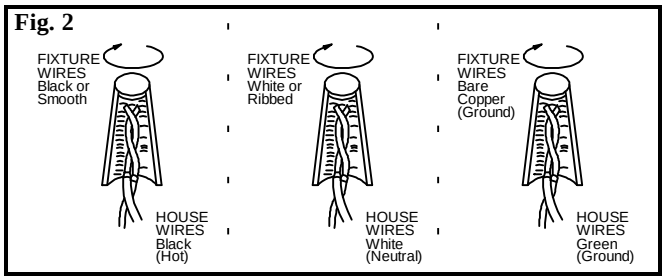
FIXTURE WIRES Black or Smooth
HOUSE WIRES Black (Hot)
FIXTURE WIRES White or Ribbed
HOUSE WIRES White (Neutral)
FIXTURE WIRES Bare Copper (Ground)
HOUSE WIRES Green (Ground)

UL® Listed

american lighting association

INSTALLATION IS NOW COMPLETED

PDF created with pdfFactory Pro trial version www.pdffactory.com